

Prizm

Portable speaker

Operation manual




Класс II



IP20

1. Functions

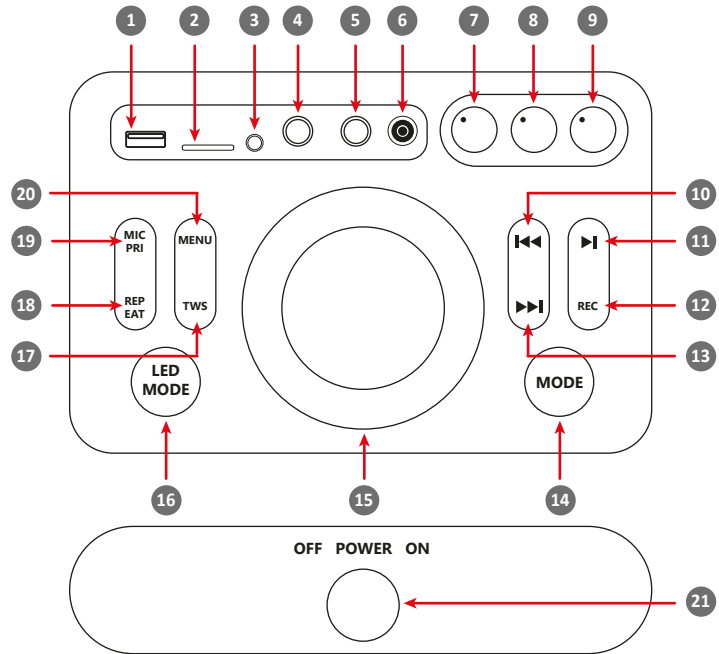


- | | |
|-------------------------|---|
| 1 USB flash drive slot* | 9 Mic delay level control |
| 2 TF card slot* | 10 Previous track / Previous FM station |
| 3 AUX | 11 Play-Pause / FM scan |
| 4 MIC connector 1 | 12 Microphone recording (to the USB flash drive)
– click: start/stop recording, long press: play recording |
| 5 MIC connector 2 | 13 Next track / Next FM station |
| 6 DC power input | 14 Change mode: Bluetooth→TF→USB→AUX→FM |
| 7 Mic volume control | 15 Volume / Bass / Treble control |
| 8 ECHO level control | |

- | | |
|--|--|
| 16 Light mode switch, switch off** | 19 Mic priority |
| 17 TWS mode | 20 Menu: Bass / Treble / Music Volume Adjustment |
| 18 Track repeat mode "one/all" (for TF or USB mode only) | 21 On/Off |


* USB flash drive must be up to 64GB in size and formatted in FAT32 or exFAT system
** To improve the quality of radio receiving, turn off the backlight

2. Remote control

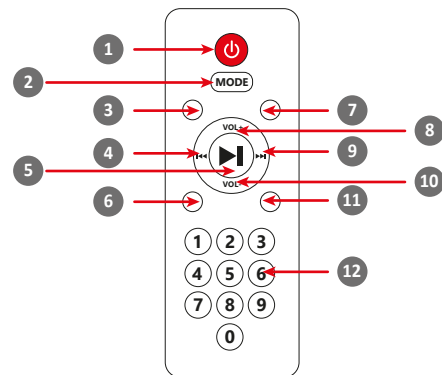


- | | |
|---|---|
| 1 Standby mode | 7 Mute |
| 2 Change mode: Bluetooth→TF→USB→AUX→FM | 8 Volume + |
| 3 Stop playing from USB and go to the first track | 9 Next track / Next FM station |
| 4 Previous track / Previous FM station | 10 Volume - |
| 5 Play-Pause | 11 EQ mode |
| 6 Track repeat mode "one/all" (TF/USB only) | 12 MP3 track number input / FM station number input |

3. Charging

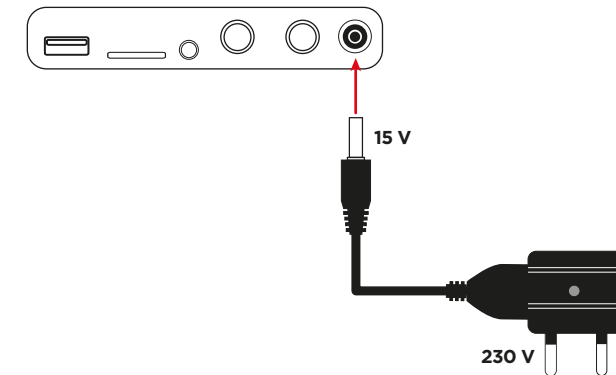


4. Bluetooth connection

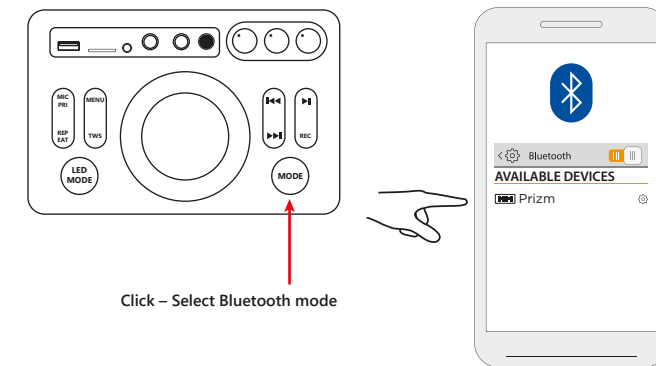

Click – Select Bluetooth mode

5. Stereo system of two Prizm (TWS mode)

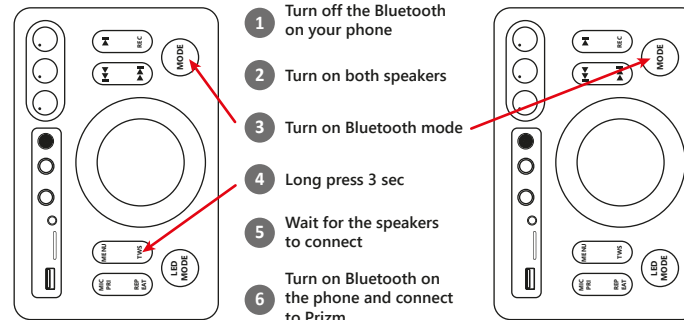

- 1 Turn off the Bluetooth on your phone
- 2 Turn on both speakers
- 3 Turn on Bluetooth mode
- 4 Long press 3 sec
- 5 Wait for the speakers to connect
- 6 Turn on Bluetooth on the phone and connect to Prizm

